




Unpack your LOOP Learning System CPR Controller (LOOP Controller). Do not plug it in yet!





Locate the serial number on the back of your LOOP Controller.

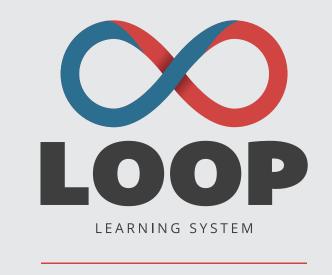

QUICK START GUIDE

3



Go to LOOPcpr.com. Click "Register LOOP" and enter the serial number.

5



Once the installer has downloaded, find and run the installer.

4



Download the LOOP Learning System CPR Software installer.

6



Plug your LOOP Controller into an active USB port and start the LOOP Learning System Software!

HOW-TO AMPLIFY YOUR CPR SKILLS PRACTICE PROGRAM

BRING YOUR STUDENTS TO LIFE WITH THE LOOP LEARNING SYSTEM

PRIMARY COMPONENTS

